

Donning Procedure Dräger Oxy 3000/6000 MK II



D-50198-2009



D-50942-2015

Dräger Oxy 3000/6000 MKII



D-50949-2015

Pull up the opener until the tightening straps fall off.



D-50961-2015

Remove the top cover.



D-50968-2015

Grasp the yellow loop of the neck strap and pull the device out of the housing.



D-50982-2015

Don the neck strap. The breathing bag points away from your body.



D-50989-2015

Pull the mouthpiece towards your face and put it into your mouth.




D-50999-2015

Position the nose clip on your nose.



D-51002-2015

Release the goggles from the button strap and put them on.

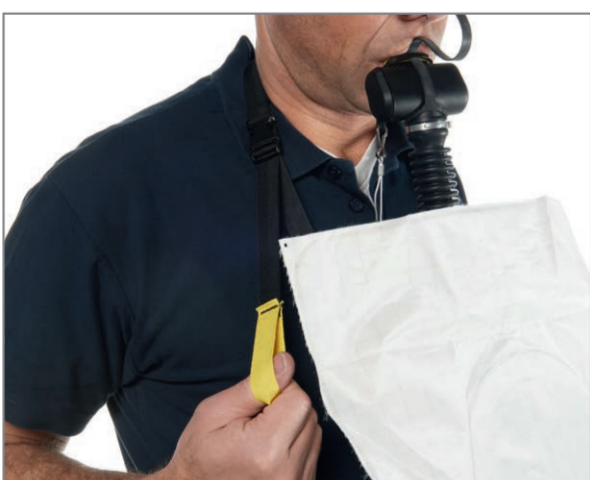

D-51008-2015

Fasten the neck strap to position the device in front of your chest.



D-51012-2015

Put the chest strap around your chest. Then fix and fasten it.



D-51023-2015

Ready to escape.

